


Install exterior insulated metal door(s) and trim.


- (a) Measure door jamb and door opening. If door jamb is taller than door opening, cut out log bottom above door to fit door jamb.
- (b) Place sliding jambs into groove in end of logs. Place screws into each board as shown.
- (c) Slide pre-hung door into position and center in jamb. Fasten door through pre-hung door jamb into sliding jambs on both sides. Fill gaps between door jamb and sliding jambs with Great Stuff foam.
- (d) Fasten trim pieces as shown on inside and outside of cabin.
- (e) Install latchset using instructions supplied with latchset.




(a)

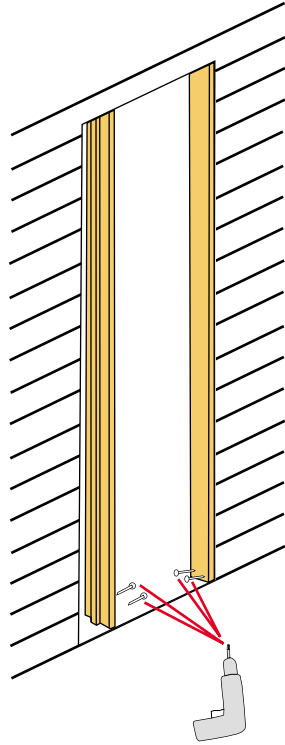

(b)

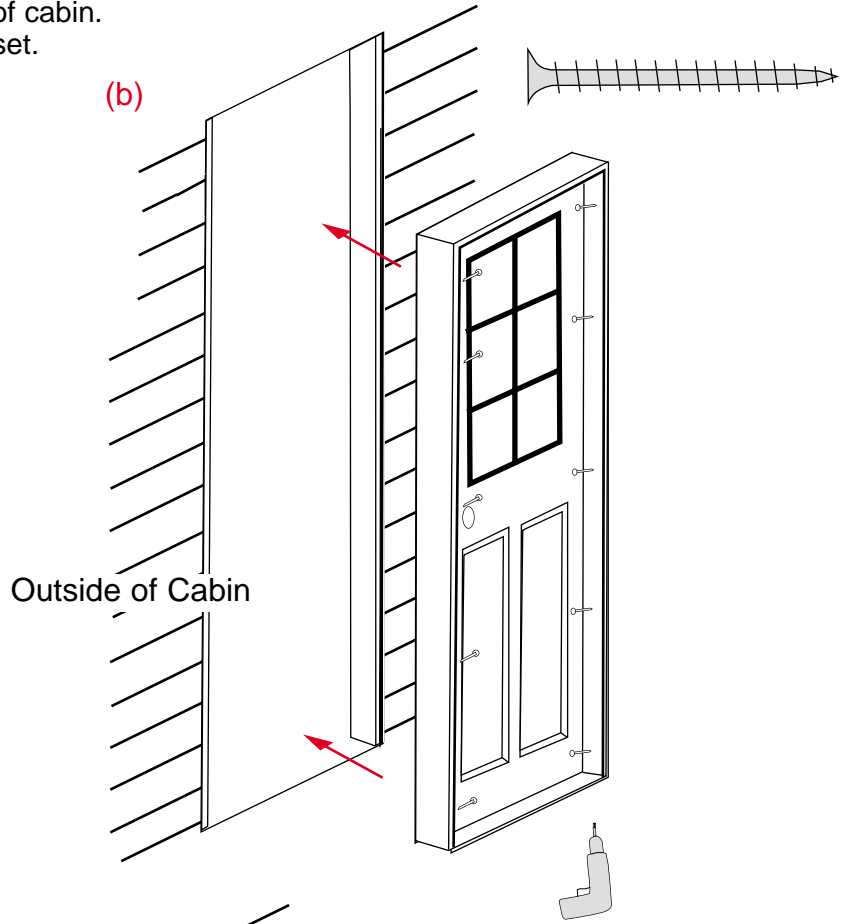

(c)

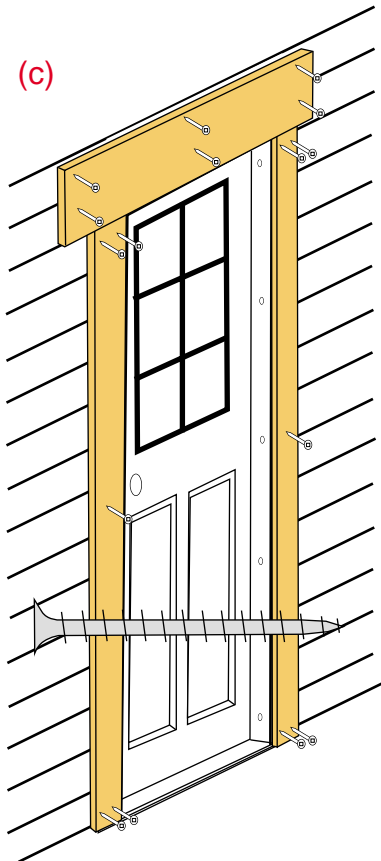

(d)

