
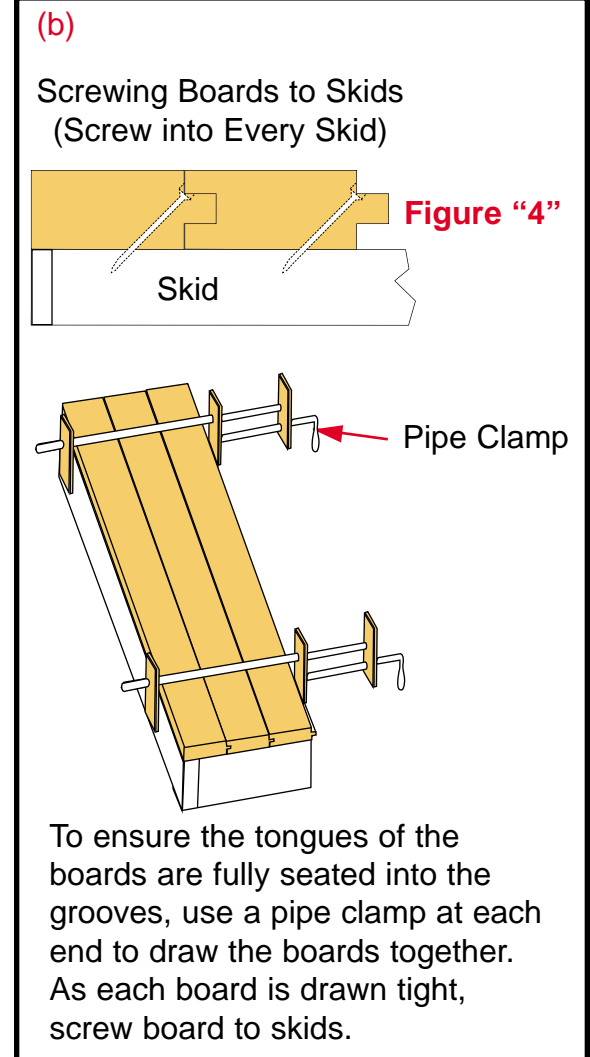
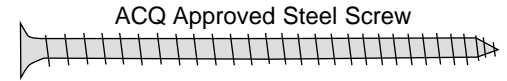
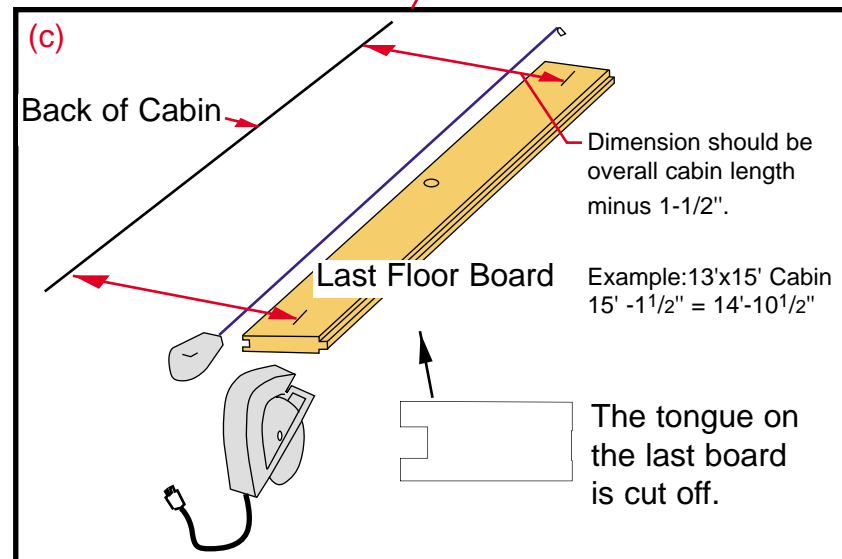
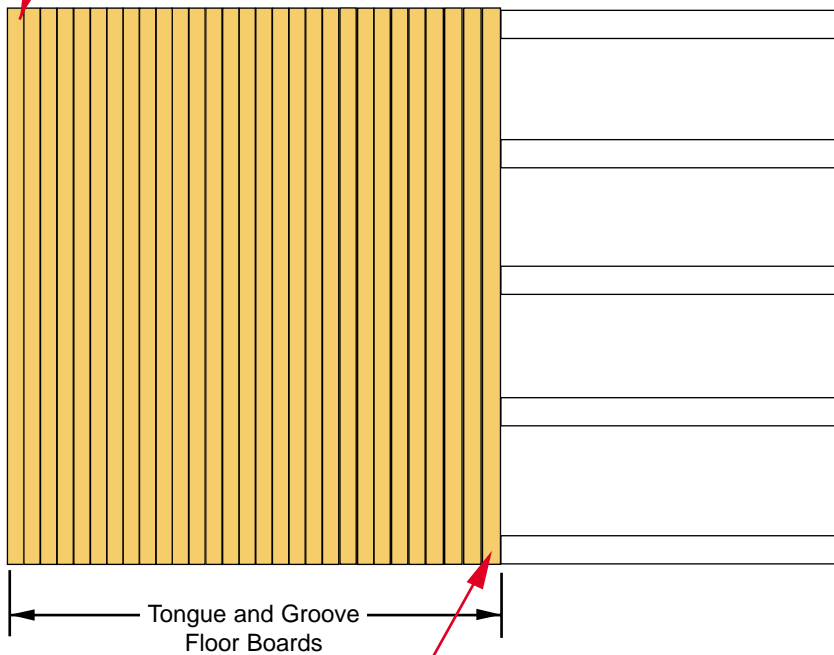


3 Place and screw floor boards.

- Align first floor board with the skids and fasten. **Note: This board does not have a groove.**
- Attach floor boards using pipe camps to draw the boards tight. **See Figure "4" for attachment methods.**
- Using the pipe clamps, place the last floor board. Measure from back of cabin and mark board on each end. Use a chalk line to mark the cut line. Rip board. By cutting this board, a smooth transition is created between the floor boards and pressure treated porch boards.

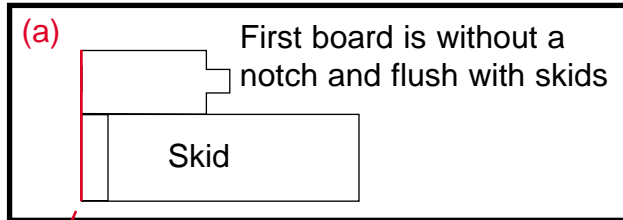

Note: Cover flooring each evening and during rain events to prevent excessive moisture absorption. Failure to protect flooring will result in excessive shrinkage after assembly.