


- 4** After the floor boards are installed, screw (brown) floor drip-edge every 3' as shown.

Floor Drip Edge

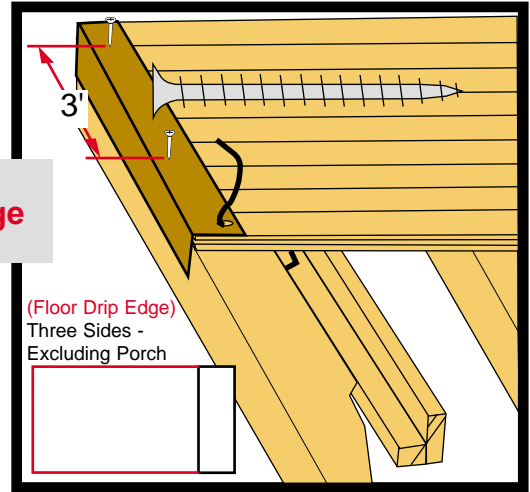

- 5** **Install porch boards.**
(a) Screw pressure treated porch boards to skids.
(b) Measure 3" from floor boards, strike a line and saw porch board ends.



ACQ Approved Steel Screw

