14 Complete all wiring connections for switches, outlets, ceiling light and smoke detector.

The center roof rafter is pre-drilled for the ceiling light and smoke detector wiring.

Note: It is strongly recommended that a qualified electrician does the final wiring where dictated by local law or for those not familiar with electrical wiring connections.

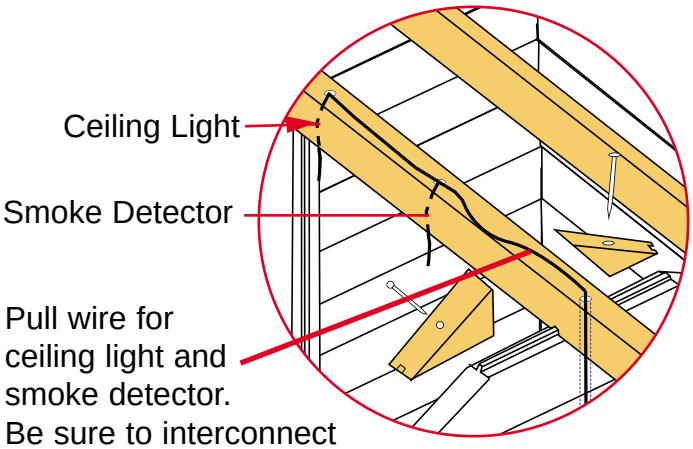

15 Check top wall log and peak logs then place caulk.

(a) If peak logs are higher than tongue on top wall log, plane peak logs to be in the same plain so roof boards install properly.

(b) Insure peaks are true and vertical.

(c) Place a bead of caulk along peak logs before installing roof boards.

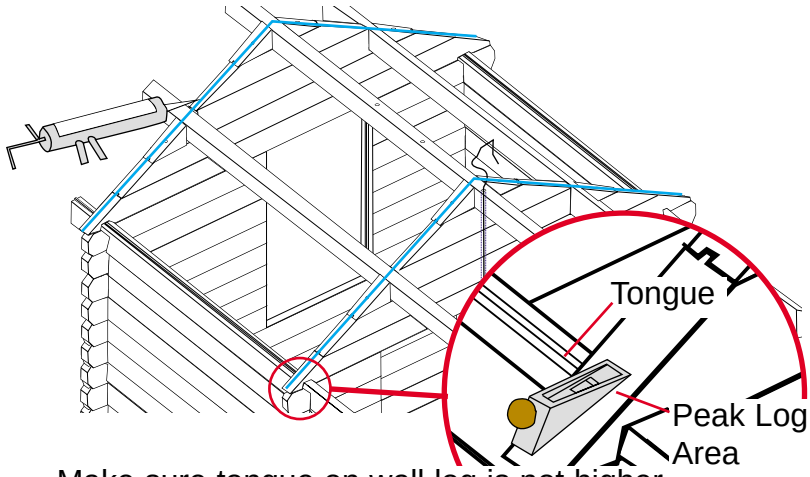

Make sure tongue on wall log is not higher than peak log. This will ensure the roof boards lay properly. If it is higher, plane until it is in line with tongue. Check the four corners of the cabin.

16 Install roof boards as shown.

(a) Align first board with edges of roof rafters. Make sure "V" groove is down. Install two nails (min.) at each wall-top and rafter location.

(b) Butt Tops of boards together as shown in Figure "9".

(c) At each peak wall, nail through roof boards into peak logs.
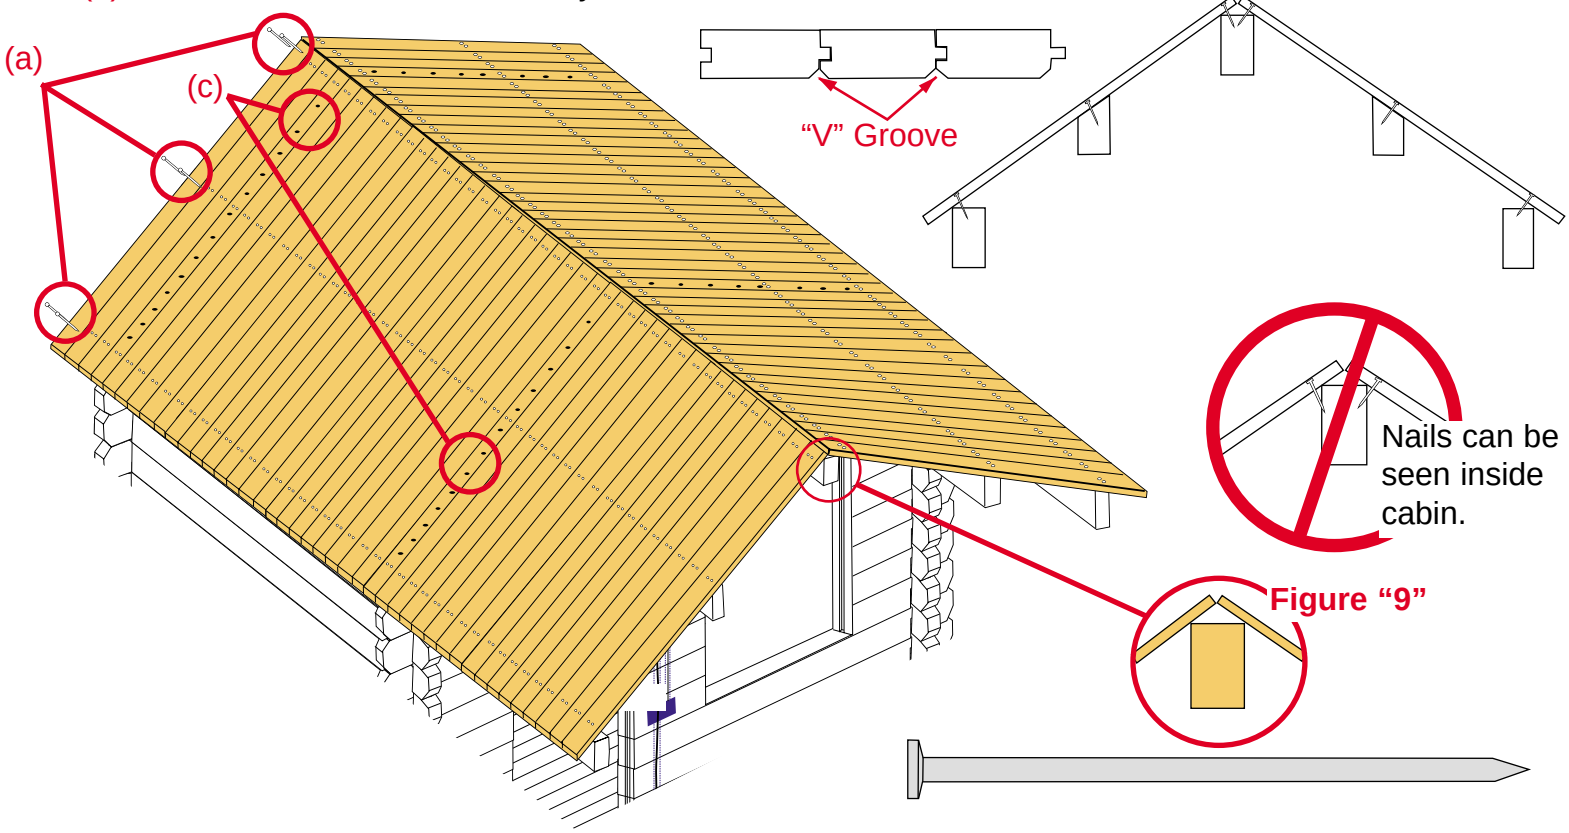
(d) Last boards will need cut so they are flush with ends of rafters.